



FSG Channel Receiver Hot Key Assignments

The FSG Channel Receiver has been programmed to work with a standard USB keyboard, or wireless keyboard. When a keyboard is plugged into the FSG Channel receiver, the user can interact with the receiver and give it commands to do the following things.

On Demand Commands

The following commands are assigned and can be used when the player is in on-demand mode. To enter the on-demand mode, hit the space bar.

Up Arrow	Navigates one line up.
Down Arrow	Navigates one line down.
Enter	Selects and starts a video.
Escape	Stops a video and returns the user to the menu, or returns the user to the previous menu, or the "Home Presentation" (Live TV, or News and Sports feeds.)
F1	Pauses a video while it is being played.
F2	Resumes a video from Pause.

Home Presentation Commands

The following commands are assigned and can be used when the player is in standard play mode.

F3	Plays a continuous loop of the FSG 30 Year Video.
F4	Plays a continuous loop of the FSG Corporate Marketing Video and FSG TV promotion.
F6	Plays a continuous loop of current Fit and Tight numbers.